


50 V /100 V combined transformer:

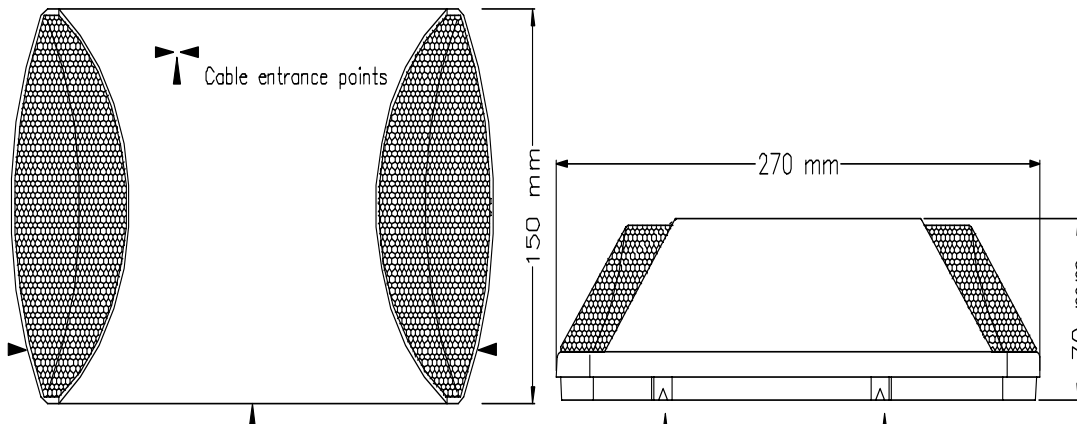


Primary connection:  
5 (White) : 6 (Green) 50 V  
5 (White) : 8 (Red) 100 V

Secondary nominal  
tappings:  
1 : 4 6,0 W  
1 : 3 3,0 W  
2 : 4 2,0 W  
1 : 2 1,5 W  
3 : 4 0,9 W  
2 : 3 0,5 W

Remove the lid by pressing the two clips on each side of the loudspeaker

1W/1m Pink Noise 1/3 octave bands

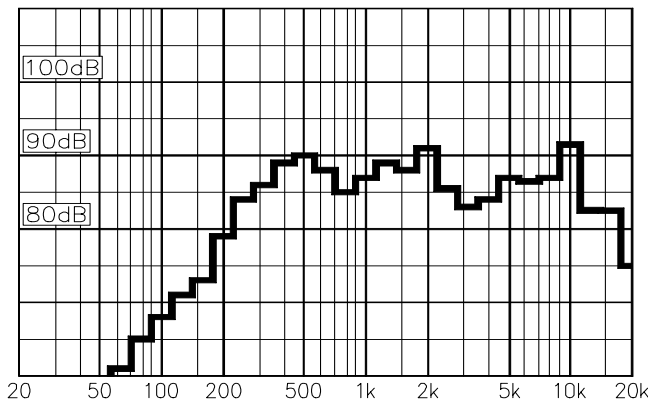

Material / Colour ..... ABS / RAL 9010  
Mounting ..... 4 screws  
Termination ..... Internal screw terminals  
Weight ..... 0,9 kg  
IP-rating .....  
Max. / min. amb. temp ..... 90 °C / -20 °C  
Standard version ..... 100 V / 50 V transformer  
Rated / max. power ..... 6 W / 10 W  
SPL 1W/1m ..... 88 dB  
SPL rated power ..... 96 dB  
Effective freq. range ..... 180 – 18000 Hz  
Dispersion vertical (-6dB) 1kHz / 4kHz ..... 180° / 120°  
Directivity factor, Q.....



## Installation, Operation and Maintenance Procedures

- To open the loudspeaker, press the two clips on each side of the loudspeaker and separate the cabinet from the chassis.
- Enter the cable trough a suitable cable entrance.
- Fasten the chassis to the wall or roof with 4 screws.
- Clip the cabinet on to the chassis after termination.
- For optimum performance, always use the correct voltage / power and operate within the frequency limits as stated.
- Do not open loudspeaker when energized.
- This loudspeaker is supplied with a 2 year warranty against defective workmanship.

Most of our products are available in different colours, impedances and power ratings.

