

Remove the lid by pressing the two clips on each side of the loudspeaker


50 V / 100 V combined transformer:

Primary connection:
5 (White) : 6 (Green) 50V
5 (White) : 8 (Red) 100 V

Secondary nominal tapings:

1 : 4	6,0 W
1 : 3	3,0 W
2 : 4	2,0 W
1 : 2	1,5 W
3 : 4	0,9 W
2 : 3	0,5 W

1W/1m Pink Noise 1/3 octave bands

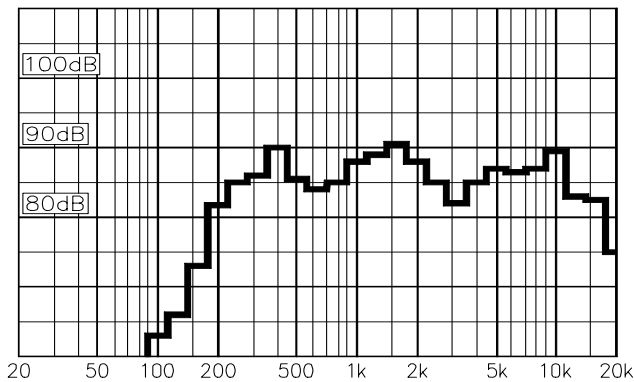

Material / Colour..... ABS / RAL 9010
Mounting 3 screws
Termination Internal screw terminals
Weight 0,8 kg
IP-rating
Max. / min. amb. temp 90 °C / -20 °C
Standard version 100 V / 50 V transformer
Rated / max. power 6 W / 10 W
SPL 1W/1m 88 dB
SPL rated power 96 dB
Effective freq. range 180 – 18000 Hz
Dispersion vertical (-6dB) 1kHz / 4kHz..... 180° / 110°
Directivity factor, Q.....



Installation, Operation and Maintenance Procedures

- To open the loudspeaker, press the two clips on each side of the loudspeaker and separate the cabinet from the chassis.
- Enter the cable trough a suitable cable entrance.
- Fasten the chassis to the wall or roof with 3 screws.
- Clip the cabinet on to the chassis after termination.
- For optimum performance, always use the correct voltage / power and operate within the frequency limits as stated.
- Do not open loudspeaker when energized.
- This loudspeaker is supplied with a 2 year warranty against defective workmanship.

Most of our products are available in different colours, impedances and power ratings.

